 
 
 


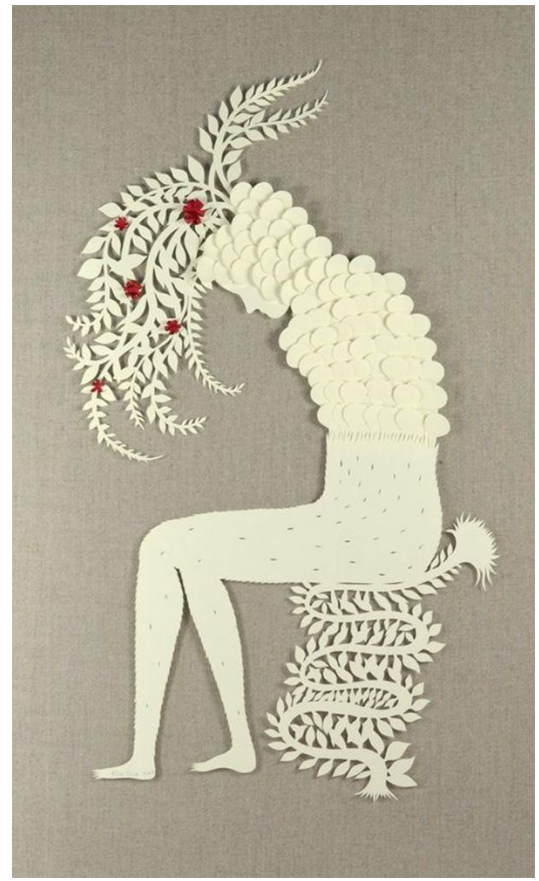

**Plotter Cutter with  
Textiles and Paper**

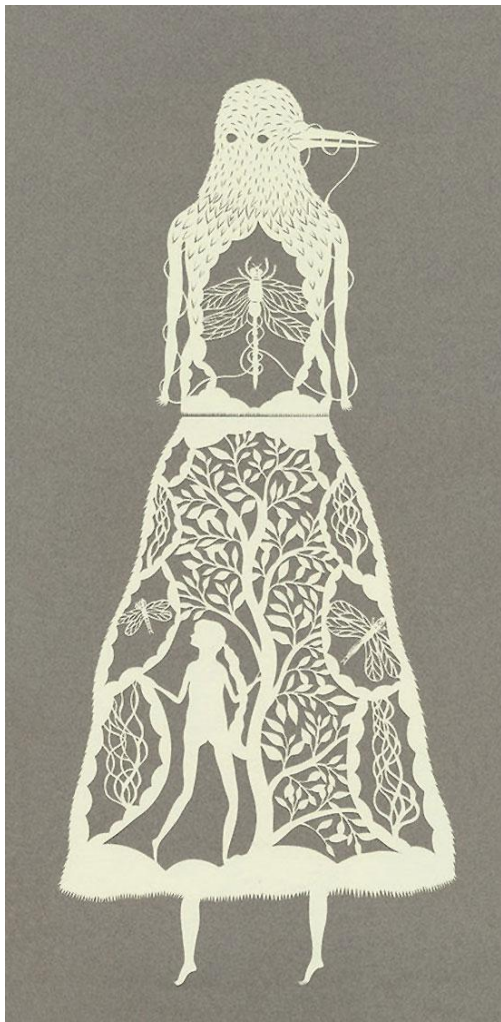

Elsa More

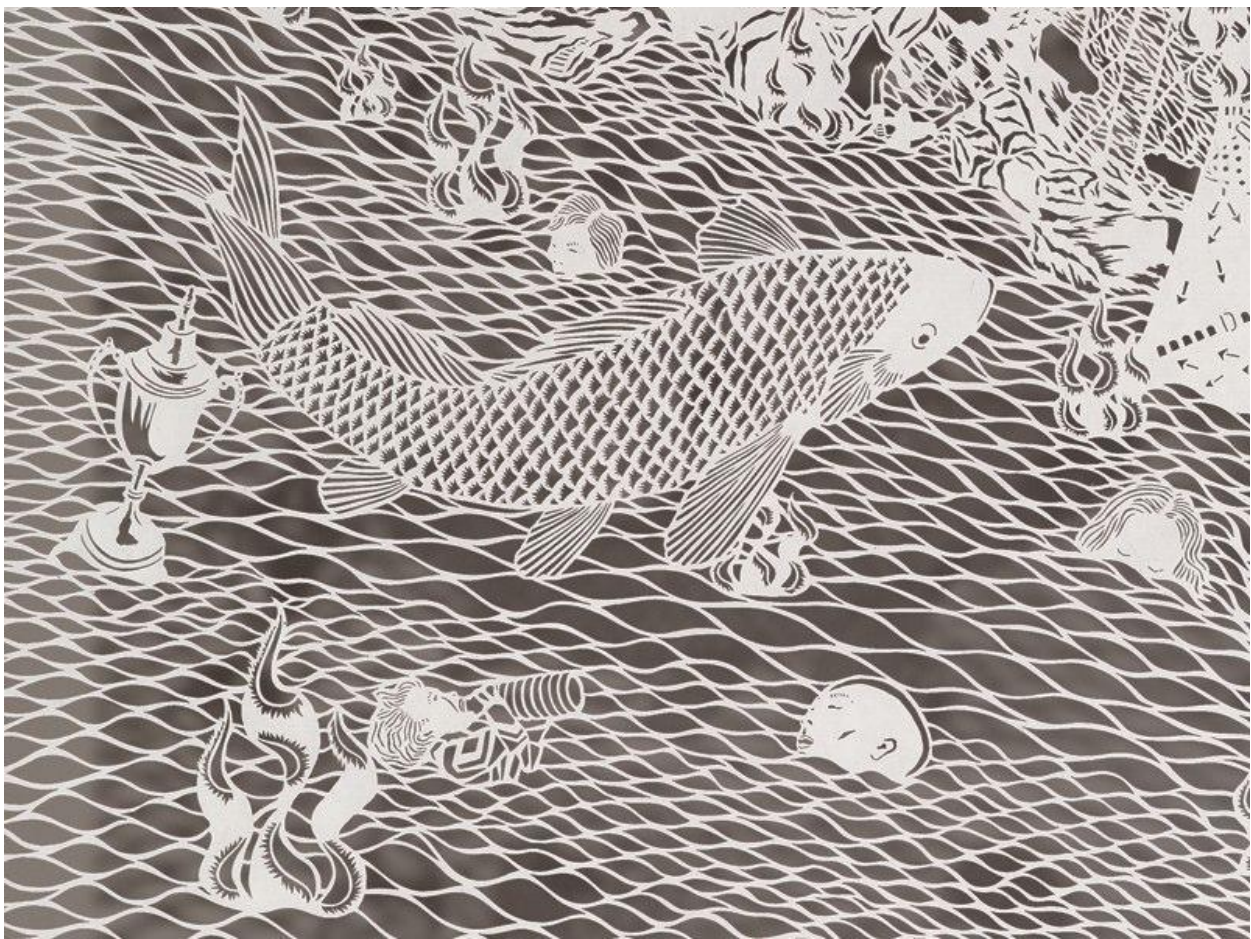

Bovey Lee




Regg Scherenschnitt



Olivia Robinson



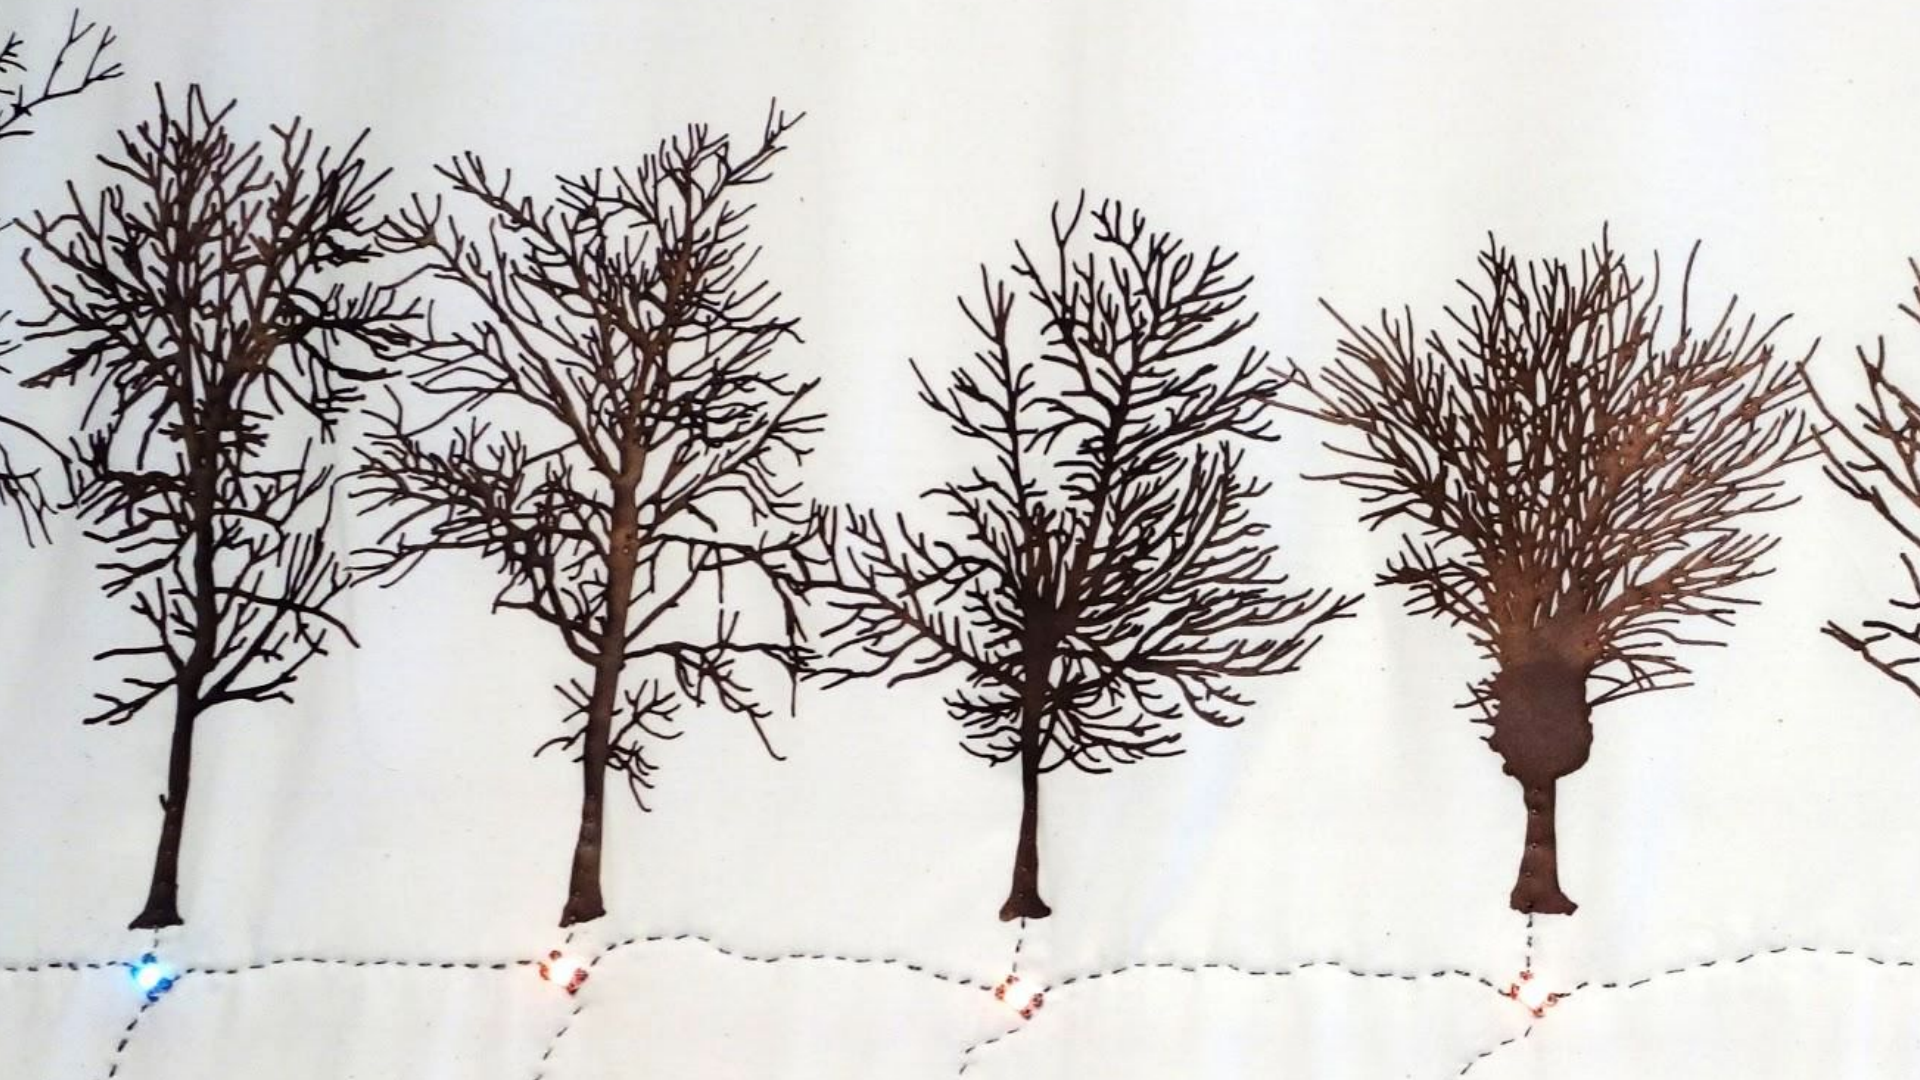



Cricut Maker



## Different Blades / Drawing Tools



Bonded-Fabric  
Blade



Fine-Point  
Blade



Deep-Point  
Blade



Knife  
Blade



Rotary  
Blade



Fine-Point  
Pen



Washable  
Fabric Pen



Calligraphy  
Pen

Use the Rotary Blade for cutting fabric.  
Use the Bonded-Fabric Blade for cutting fabric with iron-on backing. Use  
the Fine-Point Blade for cutting paper. Etc.

Chrome File Edit View History Bookmarks People Window Help

Cricut Design Space x Cricut Design Space x Olivia

Secure https://design.cricut.com/#/landing

Cricut

Welcome, Olivia [New Project](#)

Home

Canvas

- New Machine Setup
- Print then Cut Calibration
- Manage Custom Materials
- Update Firmware
- Account Details
- Link Cartridges
- Cricut Access
- Settings
- Legal
- New Features
- United States ▾
- Help
- Sign Out Olivia
- Feedback

the Cricut Rotary Blade. cut above.

Learn More

JB Stencil 2

JB Stencils 1&3

Sojourner Truth medium big print ...

view all

Mini Holiday Wreath - JGoode De...  
Seasons Greeting Christmas Tag  
Merry and Bright Christmas Tag  
Snowman I

Copyright © 2017 Provo Craft & Novelty, Inc. All rights reserved.

Cricut Design Space is an online free software for using the Cricut Maker. You must create an account.

In the Cricut Design Space, select CANVAS from the left hand column.

design.cricut.com

Canvas Untitled My Projects Save Make It

 
Undo Redo Select All Edit Align Arrange Flip Size W H Rotate Position X Y



Layers Color Sync Group Ungroup Duplicate Delete

Blank Canvas Slice Weld Attsch Flatten Contour

- New
- Templates
- Projects
- Images
- Text
- Shapes
- Upload

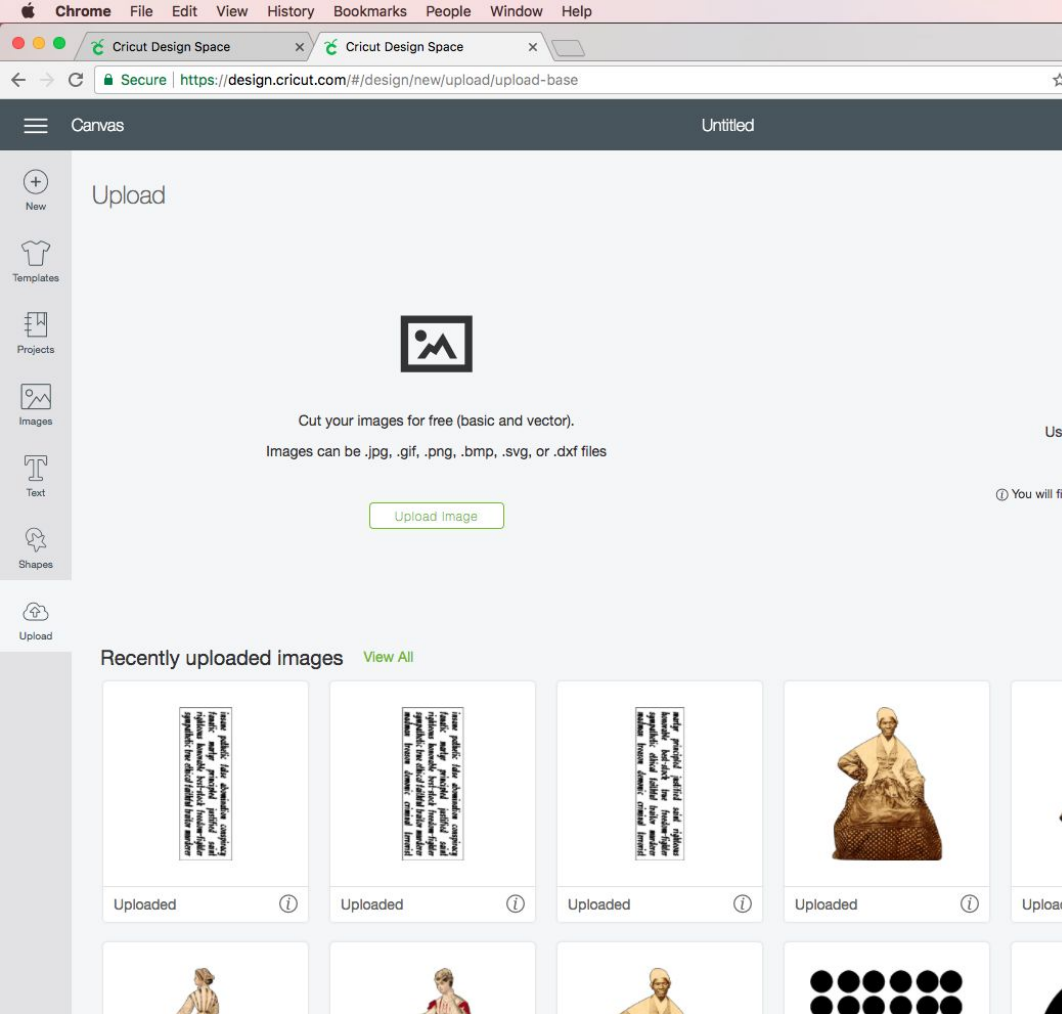

The plotter cutter will cut around the black area of the image.

Upload the images as a .jpg, .gif, or .png for best results.



- New
- Templates
- Projects
- Images
- Text
- Shapes
- Upload

### Upload image

Upload an image from your computer  
(.jpg, .gif, .png, .bmp, .svg or .dxf)



Replace Image

### Select image type

Your image will be uploaded as a single layer.

How complex is your image? Select an option below that best matches its complexity. This ensures you get the best tools to work with your image.



#### Simple

Image with high-contrast colors and a transparent or monochrome background.



#### Moderately complex

Simple details and color, with good contrast between subject and background.



#### Complex

Images with fine details, blended colors, or low contrast between subject and background. These are more challenging to work with.

Back

Cancel

Continue


**Select & erase**  
Click on the areas of the image you want to remove.  
Use advanced options below for additional controls.

[Advanced Options](#)

Reduce colors:  
8

Color tolerance  
16

New  
Templates  
Projects  
Images  
Text  
Shapes  
Upload

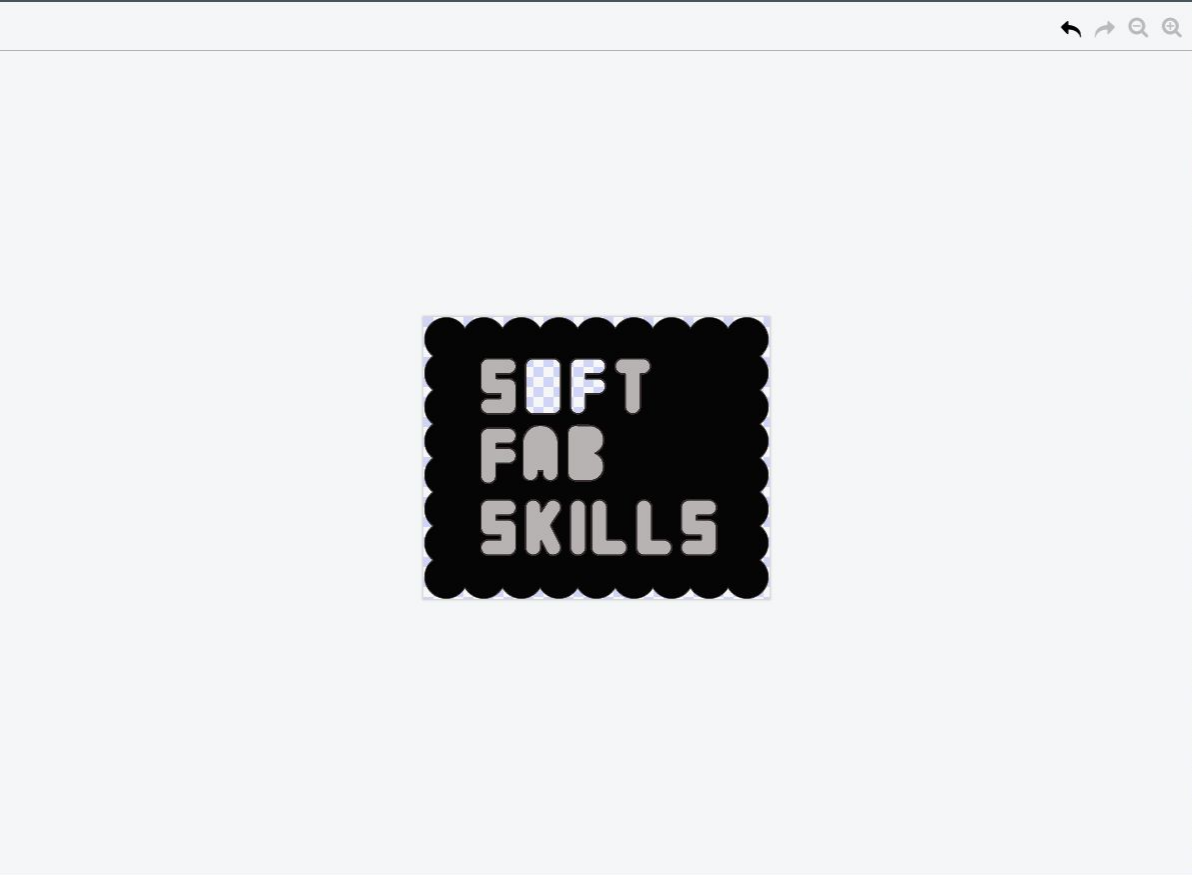

Back


Preview

Cancel


Continue

- New
- Templates
- Projects
- Images
- Text
- Shapes
- Upload



 Save as a print then cut image



 Save as a cut image

### Name & tag image

Saving the image with a name and a tag will make it easier to find when you need it.


Image name (required)

Tags (recommended)

Back

Cancel


Save

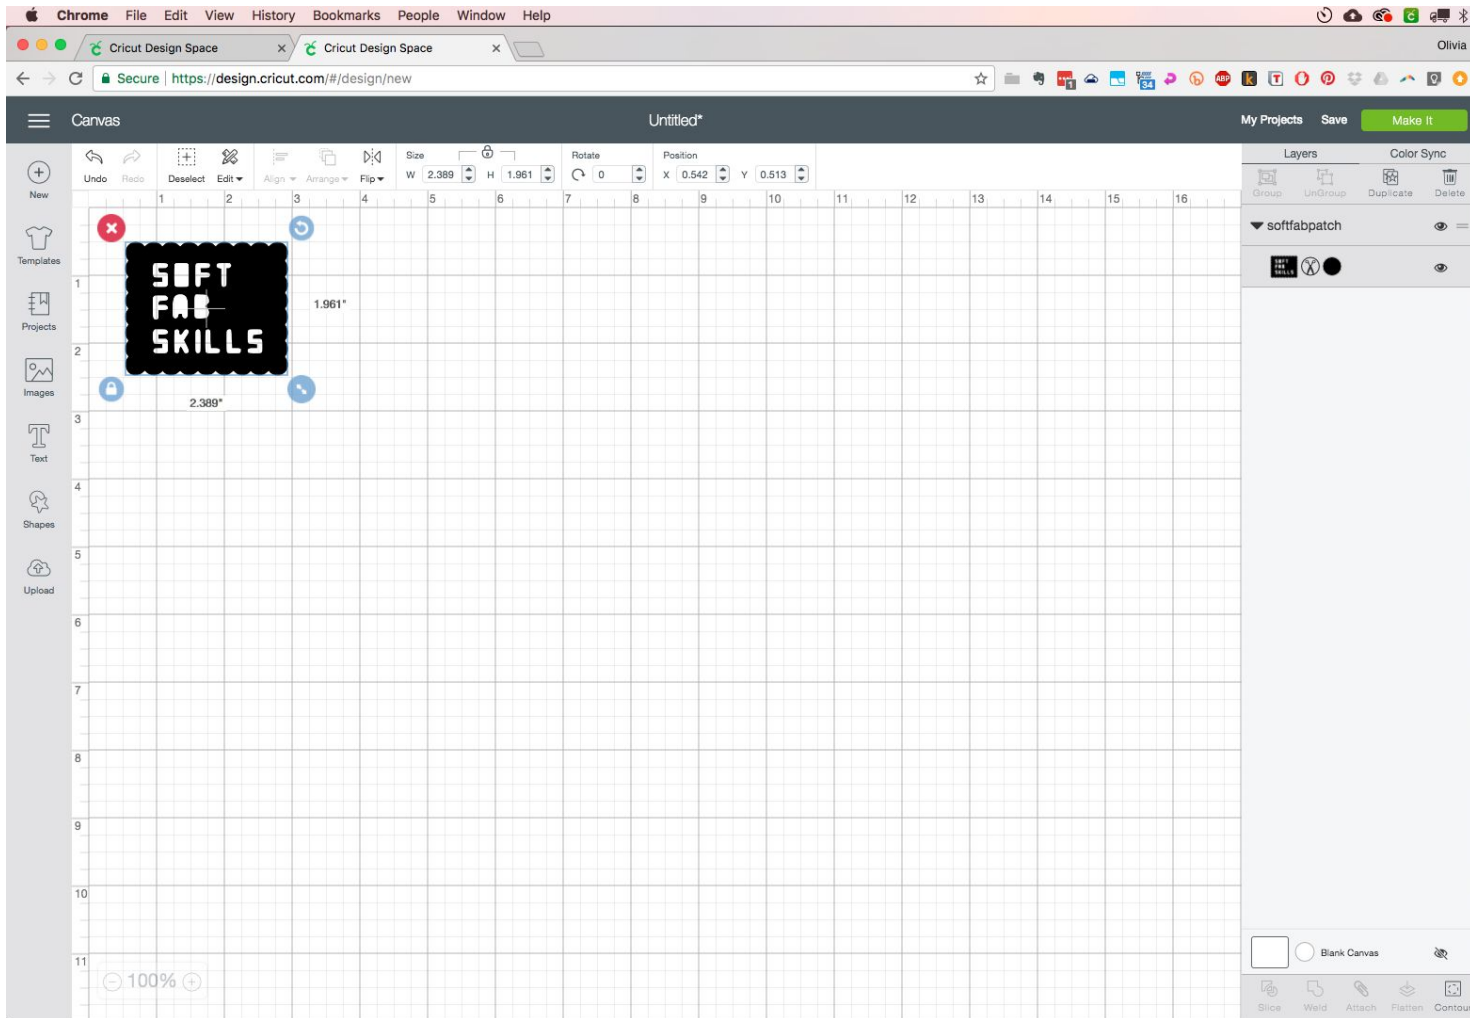


You can resize your image, or add more images to your workspace.

When you are ready for cutting, click on "Make it" button.



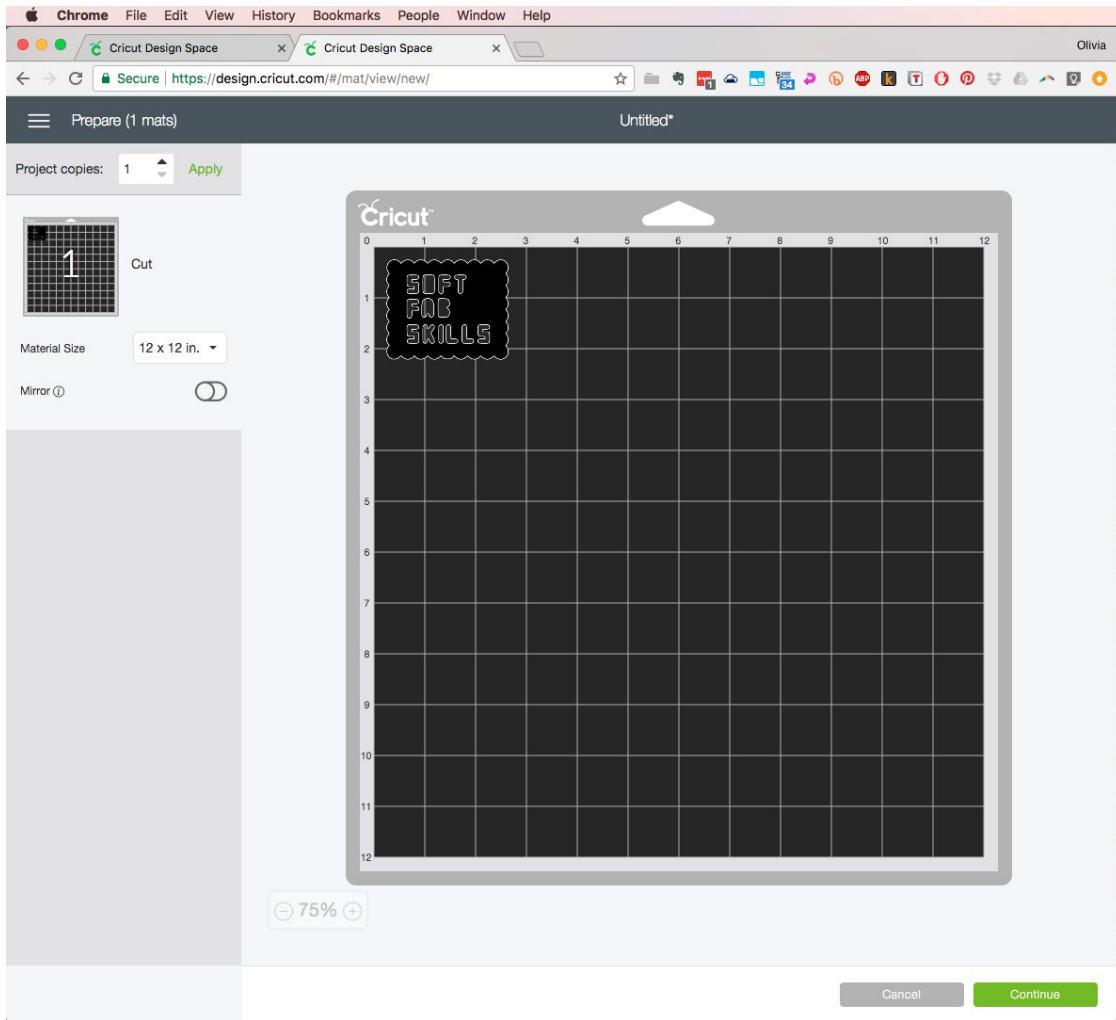


Make sure you have the correct size mat selected. You can also mirror your image here if you want it to cut backwards.

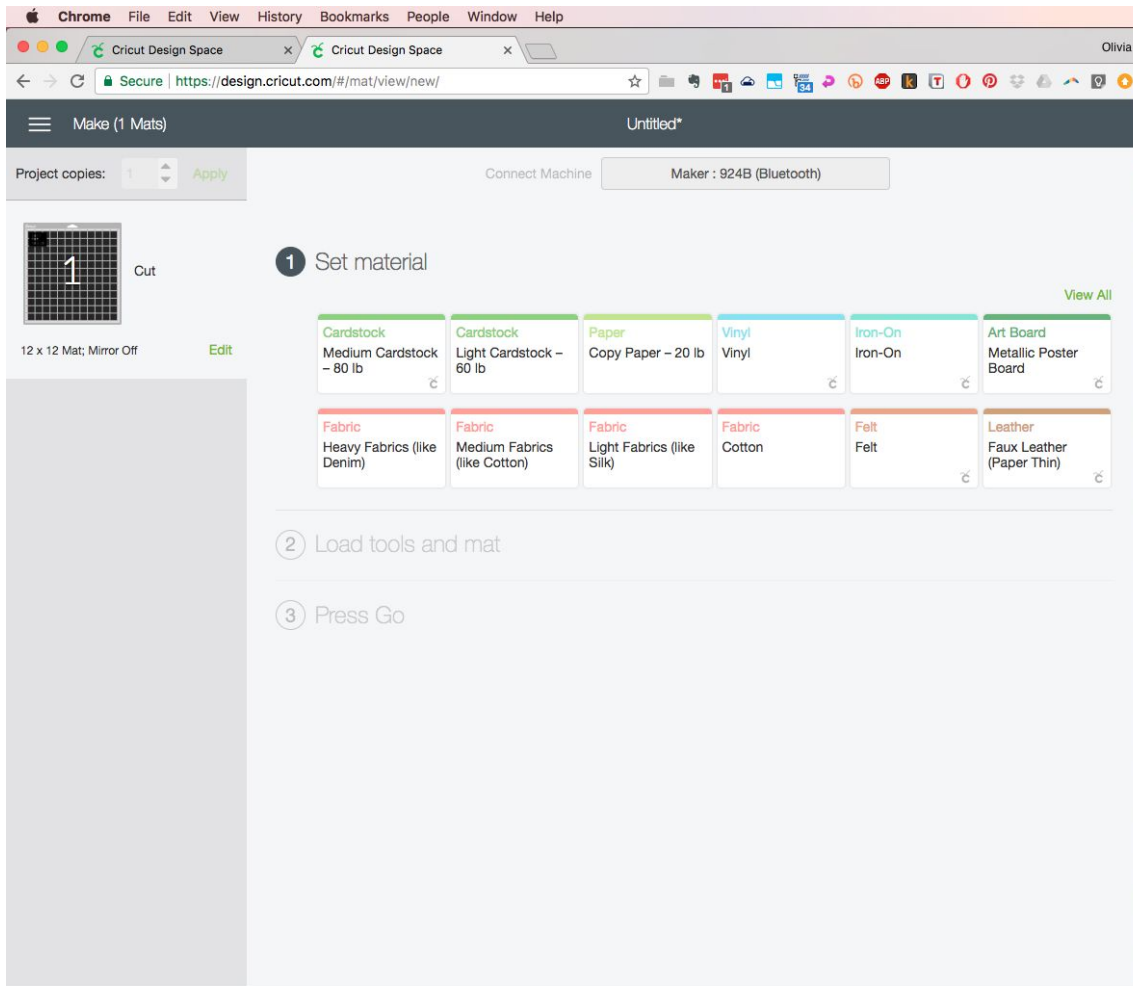

Your computer will try to connect to the Cricut Maker via Bluetooth or USB. Once connected, you will be asked to select a material you are cutting.

If you don't see yours immediately, select 'View All' to see all the material options and settings.

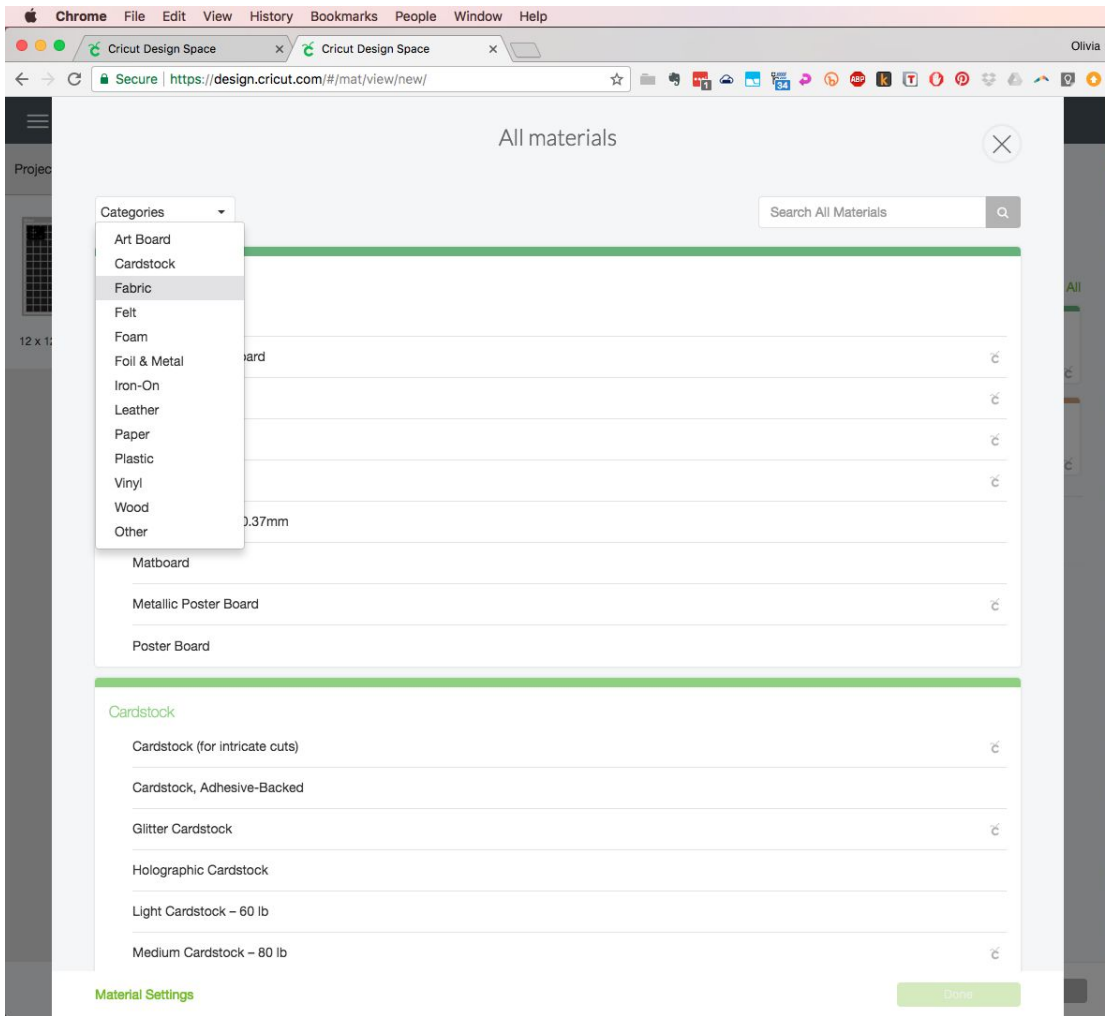

Your computer will try to connect to the Cricut Maker via Bluetooth or USB. Once connected, you will be asked to select a material you are cutting.

If you don't see yours immediately, select 'View All' to see all the material options and settings.

Chrome File Edit View History Bookmarks People Window Help

Cricut Design Space x Cricut Design Space x

Secure https://design.cricut.com/#/mat/view/new/#Fabric

Make (1 Mats) Untitled\*

Project copies: 1 Apply Connect Machine Maker: 924B (Bluetooth)

1 Cut 12 x 12 Mat; Mirror Off Edit

1 Material set to: **Medium Fabrics (like Cotton)**  
Pressure: Default

2 Load tools and mat

Load Rotary Blade in Clamp B

Load mat and press Load/Unload button


3 Press Go

Cancel


The software will tell you which tool to have loaded in the Cricut Maker.

Load the correct tool.

You will see a blinking light on the machine. Press that button when you are ready to load the mat. (see next slides)

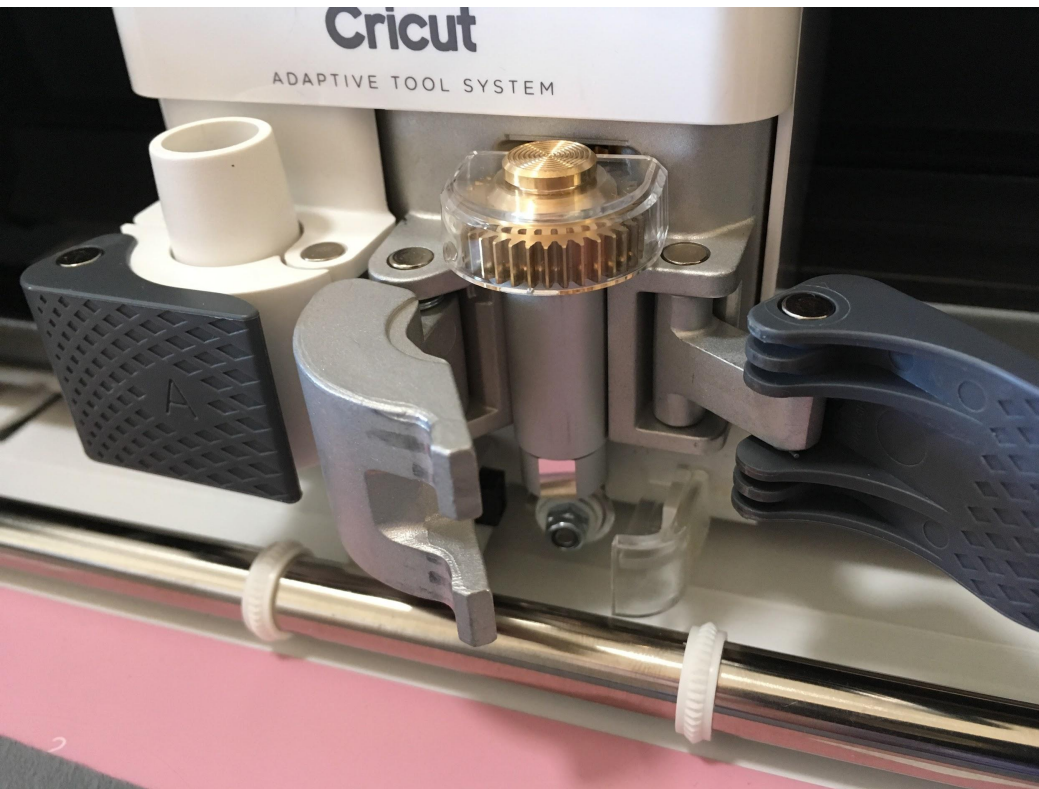

Load the correct tool. The tool shown here is the rotary cutter.

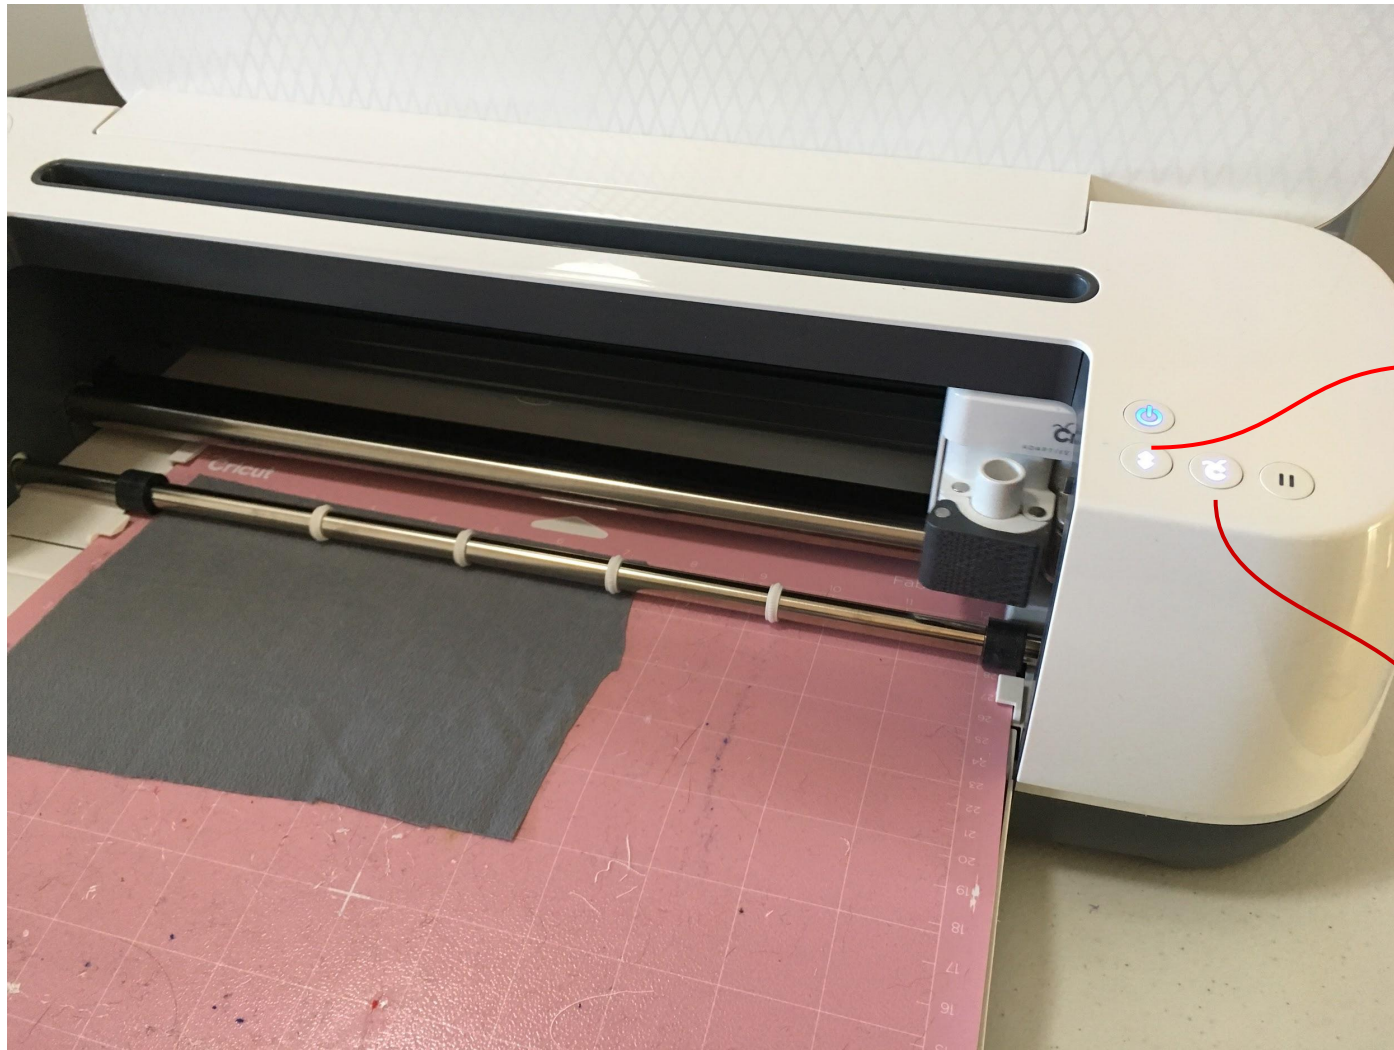

Place your material on the adhesive mat, making sure your material is fully flat.

When ready to load it into the machine, press the blinking arrows key to load the machine.

When it is ready and loaded, the "C" cricut button will blink. Press that button to begin cutting.



The cut piece of fabric