

John Richmond



Alexandra Verschueren







Laser cut wood - flexible in
two directions, like fabric



Engineered print:

Controlled placement of design within the object

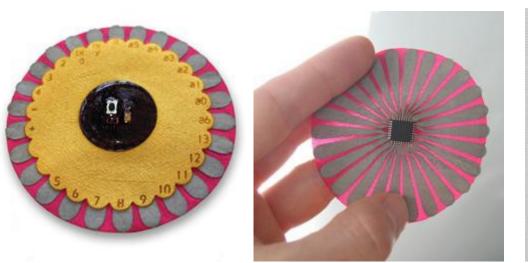

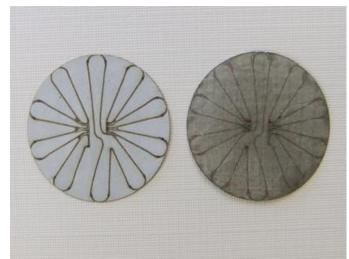


Early iterations for Lilypad Arduino




Copper fabric can be soldered onto if it's not too hot.




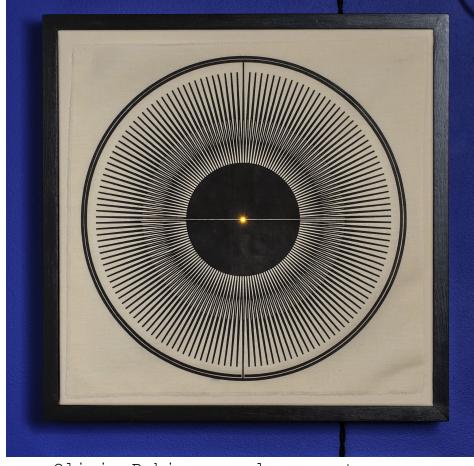


Olivia Robinson - laser cut copper fabric ironed on cotton. Copper fabric are traces for circuit.

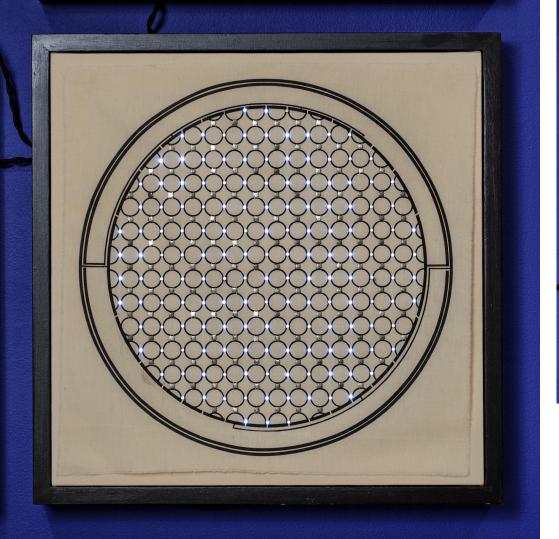



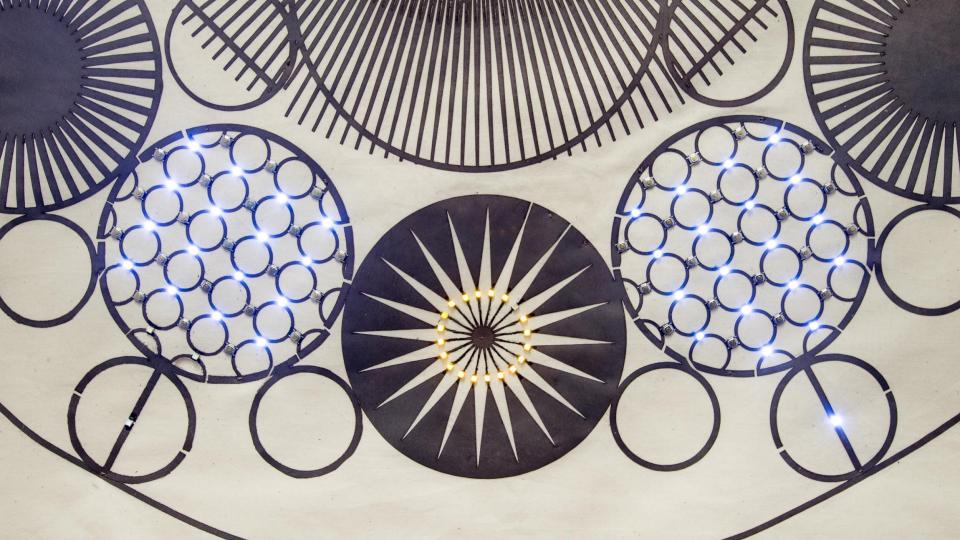

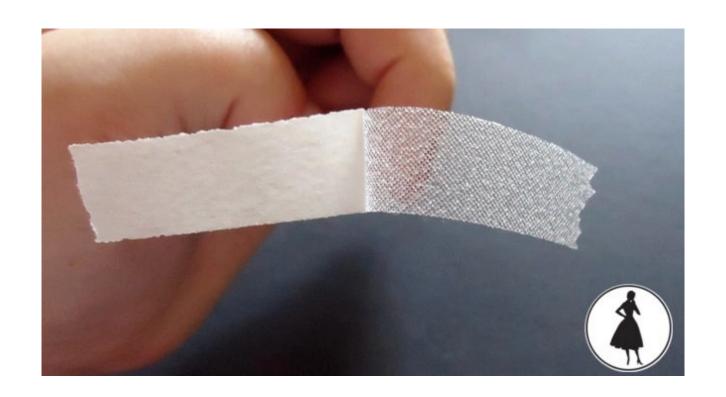

Fusible webbing

Laser Cutting on Fabric (Applique)



Make sure fabric is flat




Apply fusible webbing to the back of fabric.

Make sure the webbing is smaller than fabric piece.




Trim excess fabric and tape down to a piece of chipboard or thin plywood OR! Apply thin layer of spray adhesive to back and mount on board.

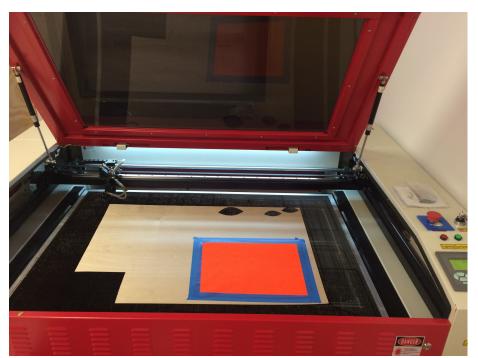



Set into machine + enter into the right settings

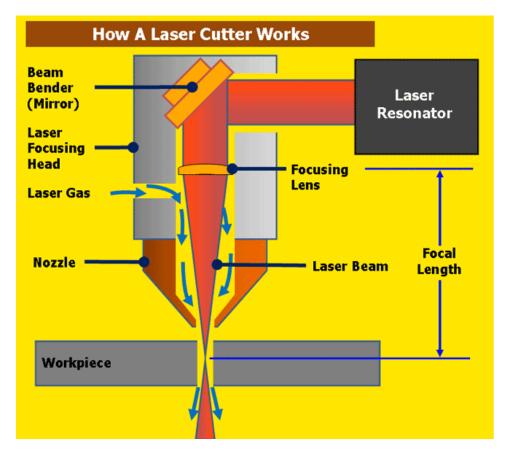

Set into machine + enter into the right settings

	Material	Content	Spe ed	Pow er	Res ult
Out-dated Laser Cutting Settings	Plain woven cotton	100% cotton	18	15	
(for Rabbit Laser Cutters)			12	10	
			12	12	
	Warp knit jersey	Cotton	15	15	
			12	15	
			12	10	etch
But these are close and might be			12	12	
a place to start	Canvas	Cotton	12	18	
			12	15	
			12	12	etch
			10	12	etch
			10	15	



Thoughts on Materials & Process

Good

- Felt or other thick nonwovens
- Tight weaves

Eh

- Loose weaves
- Thick knitted/knots
- Really intricate designs (for applique)

BAD


- No vinyl, metallic/reflective materials, neoprene any material containing chlorine
- Check with techs if you are unsure!!!!

Laser Cut Patch!


- Split into groups, at least one person must have been trained on the iDeAte laser cutting process
- Make your own design or download the Soft Fabrication Patch



Changing	JPG to DXF	file	
via Adobe	e Illustra	tor 6	

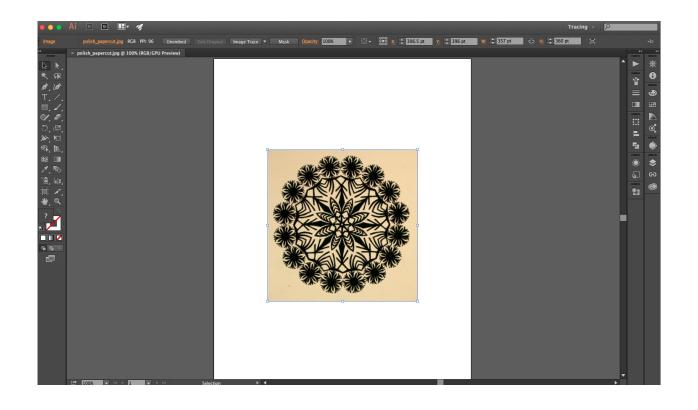



Open image in Illustrator.
Use selection tool and click on image so a blue box appears around it

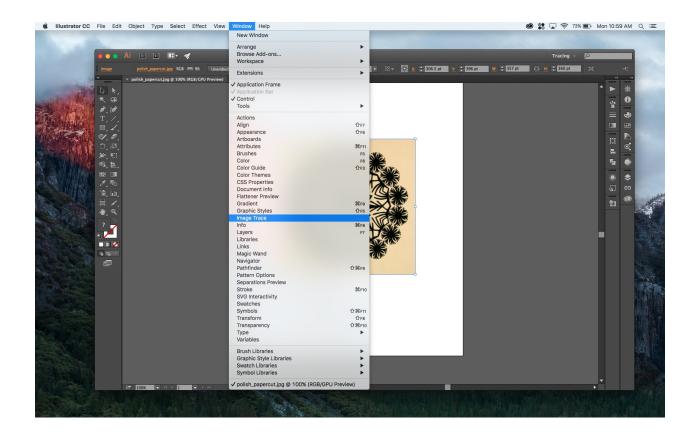


Use the top bar to find Image Trace Window (we want to custom set it, so don't use the button at the top of work window)

- Make sure Preset is set to Custom.
- Set to black and white mode.
- Check Preview Box and Ignore White (under Advanced drop down menu).
- Adjust the threshold values depending on what you need. (You may not need super skinny lines for what you are cutting)
- Click the Trace button.

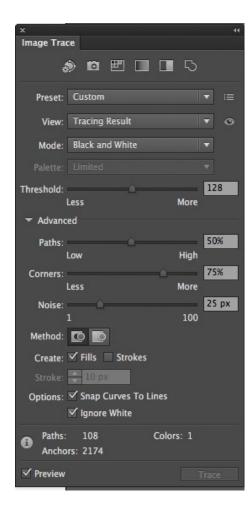

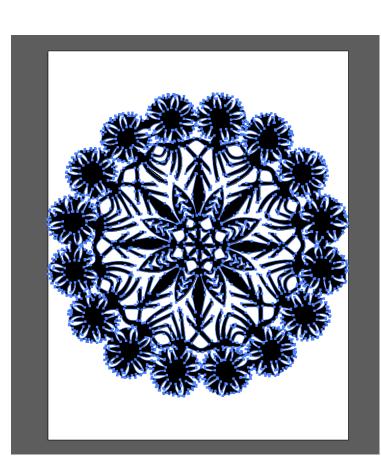


- Click "Expand" at the top of your work window to see the paths.
- Delete any unwanted paths using the direct selection tool or make any changes to curves with other tools.
- Expand/contract to necessary size (can be done in laser cutting program but wayyy less accurate)

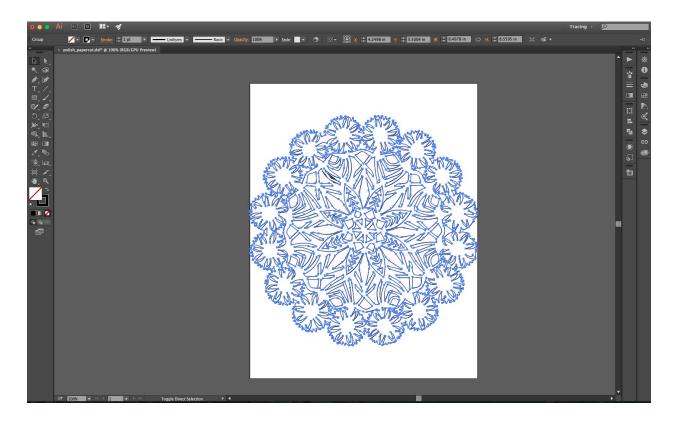

Change stroke and fill colors so that you can see the outline of what you are going to cut.

Export							
Save As:	polish_papercut	.dxf		~			
Tags:							
Where:	Desktop		•				
Format: Au	itoCAD Interchan	ge File (dxf)					
	Jse Artboards	All	Range: 1				
			Cancel	Export			

Export as a DXF.

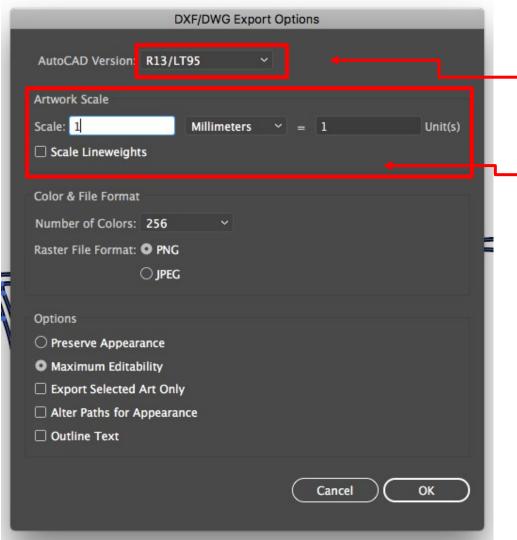

Make sure your export is "R13" and that the scale is 1 millimeter to 1 Unit.

Laser cut your file!!!!

CONVERTIO.CO

online, free

IICC

JPEG to DXF file

converter